




## F18a Lateral restraint for masonry (strap through 241mm BCI® Joist).

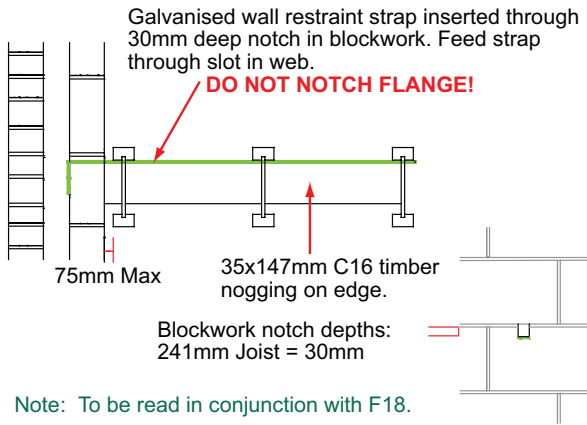


## F18b Lateral restraint for masonry (strap through 302mm or deeper BCI® Joist).

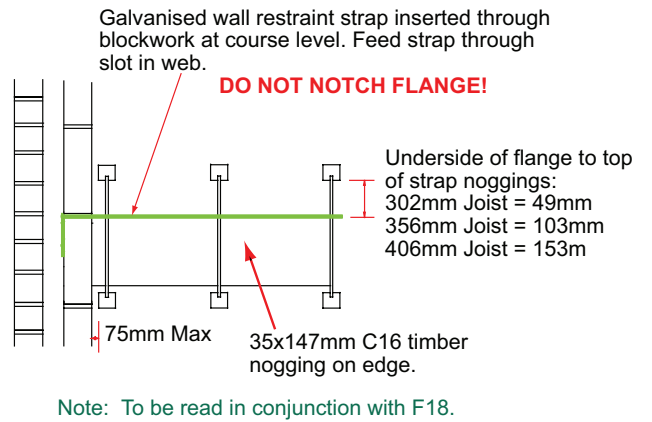


## F18c Lateral restraint for masonry (perpendicular strap over BCI® Joist).

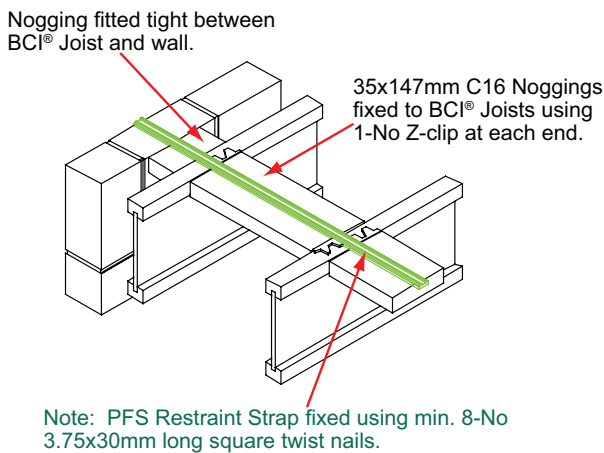

## F18d Lateral restraint for masonry (strap to side of hanger supported BCI® Joist).

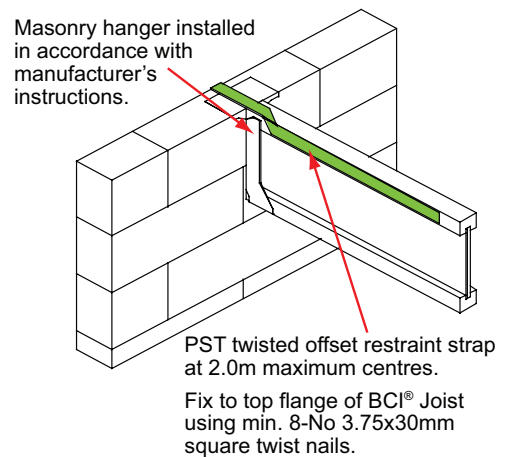

## F18e Lateral restraint for masonry (Simpson Strong-Tie Safety Fast Hanger).

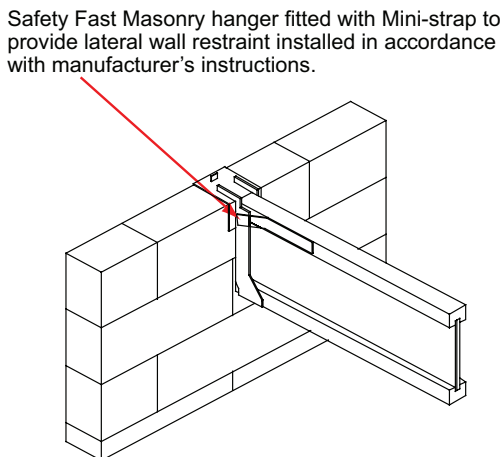

## F19 Continuous BCI® Joist through masonry wall.

